


Gulfstream V

OPERATING MANUAL

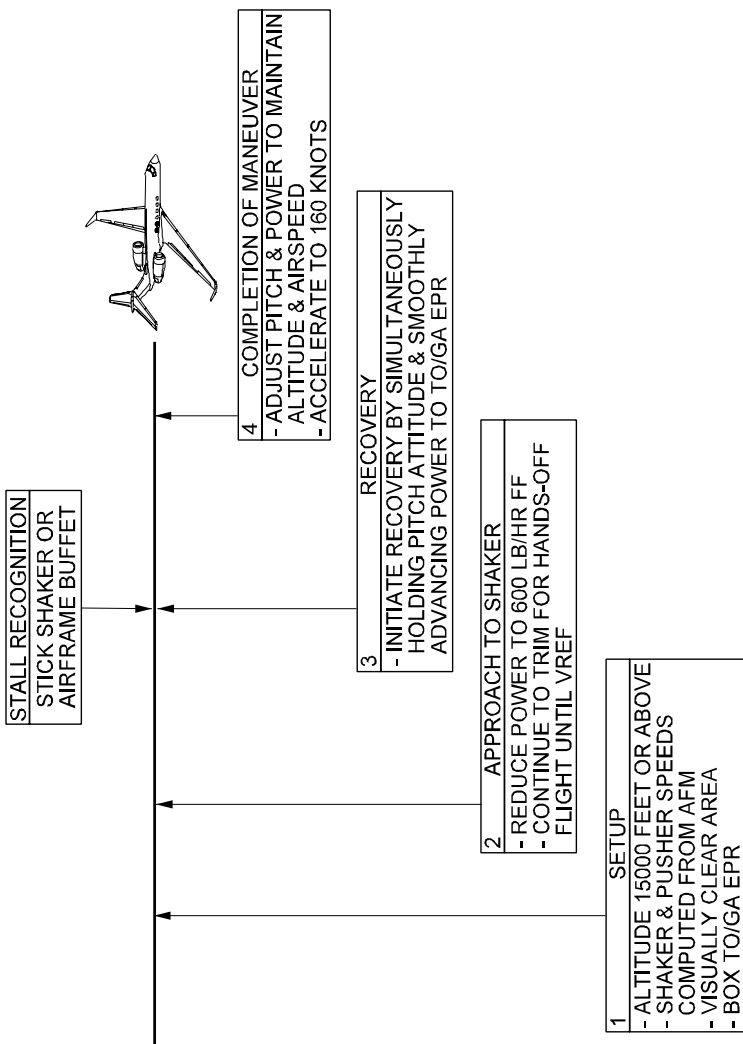

23036B01

Approach to Stall
Figure 2